

### Bluetooth 5.0 SIG Mesh

# LTECH

# Intelligent Tunable White LED Driver (Constant Voltage)

- Adopt SAMSUNG/COVESTRO V0 flame resistant polycarbonate protective housings with small size and light weight.
- Bluetooth 5.0 SIG Mesh with high networking capability are reliable and stable.
- Support control iOS or Android devices through Bluetooth connection.
- With soft-on and fade-in dimming function enhancing visual comfort.
- $^{\bullet}~$  0-100% dimming range, down to 0.1%.
- Energy-efficient driver: Efficiency 93%, PF>0.98,THD<6%.
- Comply with the EU's ErP Directive, standby power consumption<0.5W.
- Innovative thermal management technology protects the power life intelligently.
- Overheat, overvoltage, overload, short circuit protection and automatic recovery.
- The design of removable end housing is convenient to adjust the length of driver.
- Suitable for indoor light applications of I / II / III type.
- Up to 50,000-hour life time.
- 5-year warranty (Rubycon capacitor).




























## Technical Specs

Model	Model		I-24-G2B2		LM-150-12-G2B2		
	Output Voltage	24Vdc			12Vdc		
	Output Voltage Range	24Vdc =	± 0.5Vdc		12Vdc ± 0.5Vdc		
	Output Current	Max. 6.:			Max. 12.5A		
ľ	Output Power	Max. 15					
	Output Power Range	0~150W					
OUTPUT	Strobe Level			ı			
-	Dimming Range	High frequency exemption level					
		0~100%, down to 0.1%					
-	Overload Power Limitation	>102%					
ŀ	Ripple		ripple<200mV, noise<5	uumv	Switch ripple<200mV, noise<800mV		
<u> </u>	PWM frequency	3600Hz					
-	Dimming Interface	Bluetooth 5.0 SIG Mesh					
-	Input Voltage	220-240Vac, 200-280Vdc					
	Frequency	50/60Hz					
	Input Current	<0.75A/230Vac					
INPUT	Power Factor	PF>0.98/230Vac (at full load)					
	THD	THD<6	%@230Vac (at full loa	d)			
	Efficiency (typ.)	93% 92%					
	Standby Power Loss	<0.5W					
	Inrush Current	Cold start 45A(Test twidth=500us tested under 50%   Ipeak)/230Vac					
	Anti Surge	L-N: 2KV					
	Leakage Current	Max. 0.	5mA				
	Working Temperature	ta: -20 ~ 50°C tc: 85°C					
Ī	Working Humidity	20 ~ 95%RH, non-condensing					
ENVIRONMENT	Storage Temperature, Humidity	-40 ~ 80°C, 10~95%RH					
İ	Temperature Coefficient	±0.03%/°C[0-50°C]					
	Vibration	10-500Hz, 2G 12min/1cycle, 72 min for X, Y and Z axes respectively					
	Overheat Protection	Intelligently adjust or turn off the output current if the PCB temperature >110°C, and recover automatically					
ŀ	Overload Protection	Shut down the output when current load \$102%, and recover automatically					
PROTECTION -	Short Circuit Protection	Enter hiccup mode if short circuit occurs, and recover automatically					
ŀ	Overvoltage Protection						
	Withstand Voltage		Shut down the output when non-load voltage>28V, and recover automatically    Shut down the output when non-load voltage>16V, and recover automatically   VP 0/P 2750/ce				
ŀ	Isolation Resistance	\/P-0/P: 3750Vac \/P-0/P: 100MΩ/500VDC/25°C/70%RH					
	isotation resistance	CCC	China	GB19510.1, GB19510.14			
	Safety Standards	TUV	Germany	EN61347-1, EN61347-2-13, EN62493			
		CB	CB member states	IEC61347-1, IEC61347-2-13			
		CE	European Union	EN61347-1, EN61347-2-13, EN62384, EN615	47		
		KC	Korea	KC61347-1, KC61347-2-13			
		EAC	Russia	IEC61347-1, IEC61347-2-13			
SAFETY		RCM	Australia	AS 61347-1, AS 61347-2-13			
&		EMEC	Europe	EN61347-1, EN61347-2-13, EN62384			
EMC		UKCA	Britain	BS EN 61347-2-13:2014+A1:2017, BS EN 613	347-1:2015+A1:2021		
	EMC Emission	CCC	China	GB/T17743, GB17625.1			
		CE	European Union	EN55015, EN61000-3-2, EN61000-3-3, EN61	547		
		KC EAC	Korea Russia	KS C 9815, KS C 9547 IEC62493, IEC61547, EH55015			
		RCM	Australia	EN55015, EN61000-3-2, EN61000-3-3, EN61	547		
		UKCA Britain BS EN IEC 55015:2019/A11:2020, BS EN 61547:2009, BS EN IEC 61000-3-2:2019, BS EN 61000-3-3:2013/A1:2019					
	EMC Immunity	EN61000-4-2,3,4,5,6,8,11, EN61547					
	Strobe Test Standard	IEEE 1789					
$\rightarrow$	Gross weight(G.W)	430g±10g					
OTHERS-	-	352×43×30mm(L×W×H)					
	Dimensions						




### **Product Size**

Uint: mm

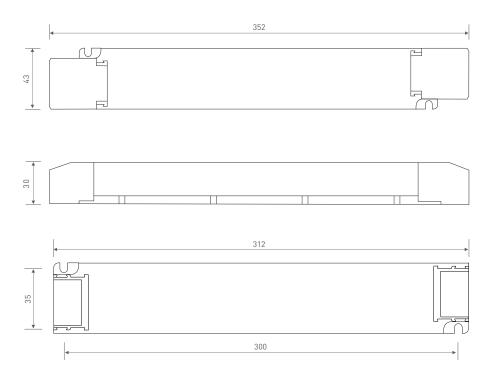


# Wiring Diagram

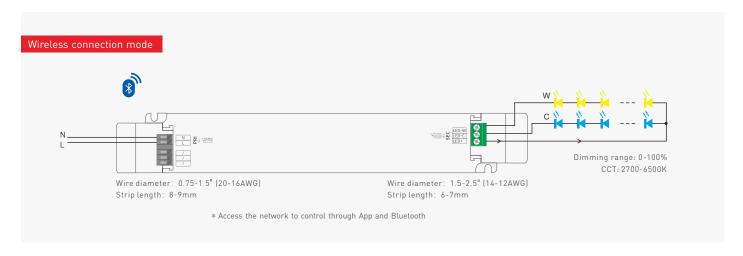

# Protective Housing Application Diagram



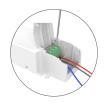













Open the protective housing and push the side housing outwards to pry up the wire fixing  $\ensuremath{\mathsf{S}}$ board with a screwdriver . Then connect to electrical wires as wiring diagram shows. Press down the wire fixing board to fix the the electrical wires, finally close the protective housing.

Press down the back side of the protective housing and move it from side to side to remove it.





### Installation Precautions

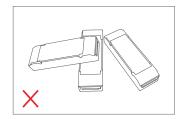

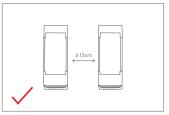



Please do not stack the products. The distance between two products should be  $\geqslant$ 15cm so as not to affect heat dissipation and the lifespan of the products.

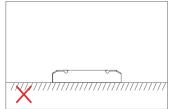

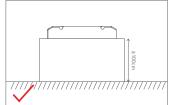


Please do not place the products on the floor. The distance between the product and the floor should be  $\geqslant$ 100cm so as to avoid signal interference.

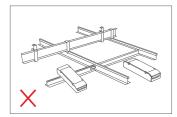

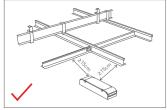


Please do not place the products near a large area of metal objects (such as metal stud ceilings). The distance between the product and the metal object should be  $\geqslant 15 \, \mathrm{cm}$  so as to avoid signal interference.




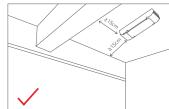



Please do not install the products on beams or near the corners. The distance between the product and the beam or the corner should be  $\geqslant 15 \,\mathrm{cm}$  so as to avoid signal interference.

# Relationship Diagrams

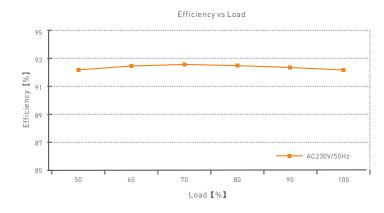

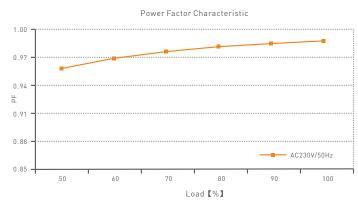


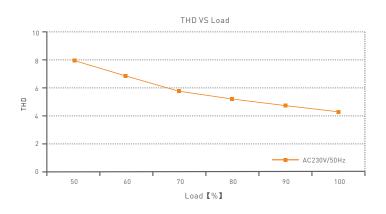


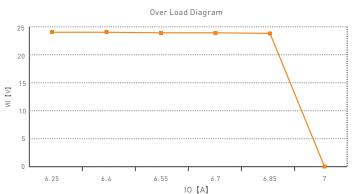







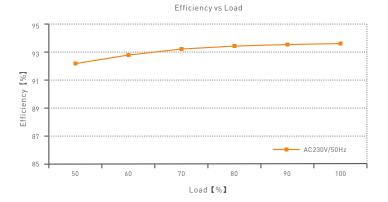

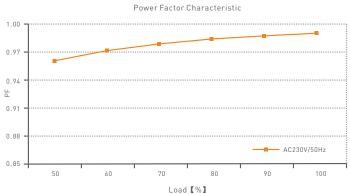

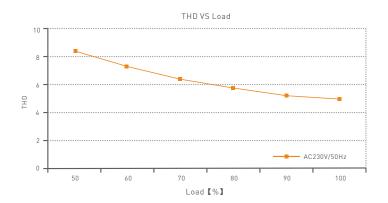


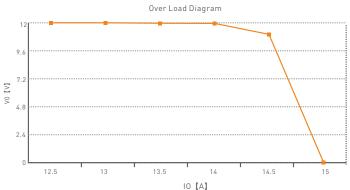

LM-150-12-G2B2


### Flicker Test Table

Limit Value of Modulation in Low Risk Areas						
0.2						
0.025 × f						
0.08 × f						
Exemption assessment						
Limit Value of Modulation in No Effect Areas						
0.1						
0.01 × f						
$[0.08/2.5] \times f$						
Exemption assessment (High frequency exemption)						

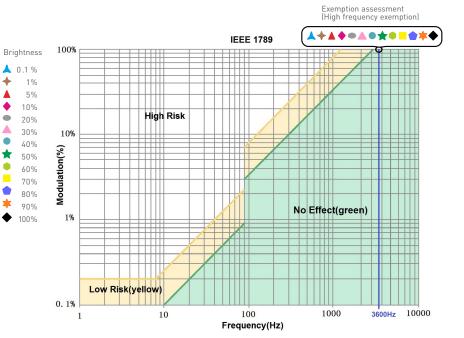




### System Diagram

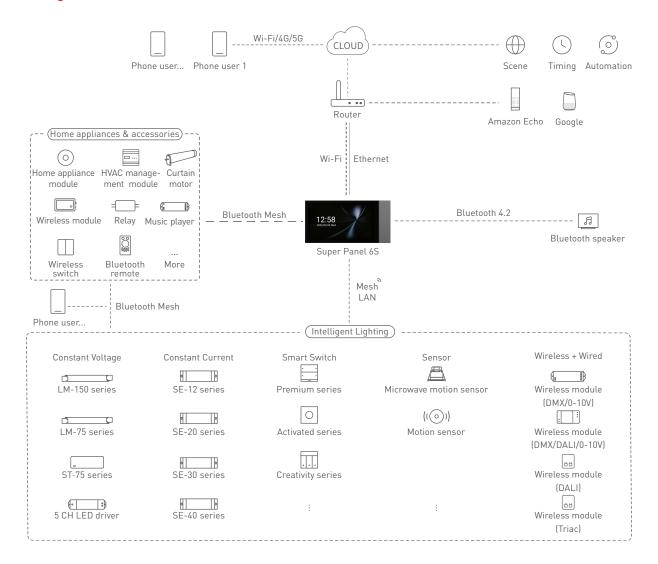

### Recommend Applications

1. Achieve fast dimming control.

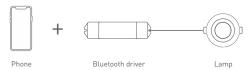

 $2. \ Both \ App \ and \ remote \ can \ control \ the \ driver \ after \ connecting \ the \ remote \ to \ the \ driver \ with \ App.$ 



3. Both App and Super Panel 6S can control the driver simultaneously after connecting the Super Panel 6S to the driver with App. By connecting the Super Panel to network, you are allowed to control the driver, cloud scenes and automation remotely with App.



 ${\it 4......} More applications of intelligent control are waiting for you to set up.\\$ 



### App Operating Instructions

#### 1. Register an account

The App is available on iOS or Android devices. Scan the QR code below with you mobile phone and follow the prompts to complete the App installation. Open the App to log in or register an account.



Scan and download the APF

#### 2. Paring instructions

Open the APP and create a home if you are a new user. Click "+" icon in the upper right corner and access the "Add Device" list, then follow the prompts to add the device. Pick "Smart lighting-CT light" from the list and follow the prompts to power on the device firstly. Make sure the device is not connected to the network. Then click "Bluetooth Search" and follow the prompts to add the device.








#### 3. Control interface settings

After pairing up your device, go to the control interface. You'll be able to achieve your desired lighting effects by changing brightness and color temperature. Click "Theme" and you'll easily switch to multiple theme lighting effects with one tap. Click "Mode" and the App provides you editable advanced modes. Customize dynamic modes to put you into a more colorful life.



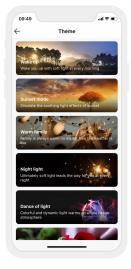





#### 4. Light groups

Users are able to combine the same type of light fixtures into a group to control them simultaneously. Once you create the group, you can set the dim level and adjust the color temperature more easily. Pick "Group-CT light group" from the list. Follow the prompts to rename the group and click "Next" to pick the lights you are going to group together and click "Save".









#### 5. Advanced functions

This driver can be linked up with gateway function devices (such as Super Panel 6S) to achieve the advanced functions from local scenes and cloud scenes to automation.




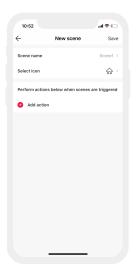

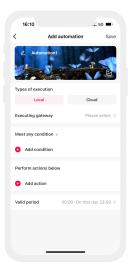

# Reset The Device (Reset to factory defaults)

Make sure the driver is well-connected to a lamp and the lamp is on, turn it off with the switch and after 15s turn it on. After 2s, turn it off again. Repeat the same operation 6 times. When the lamp flashes 5 times , reset the device to factory defaults successfully.

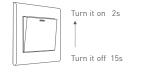



# Packaging Specifications

Model	LM-150-24-G2B2 / LM-150-12-G2B2
Carton Dimensions	370×340×93mm(L×W×H)
Quantity	10PCS/Layer; 2Layer/Carton; 20PCS/Carton
Weight	0.43kg/PC; 9.4kg±5%/Carton

## Packaging Image







Carton Packaging

# Transportation and Storage

#### 1. Transportation

Products can be shipped via vehicles, boats and planes.

During transportation, products should be protected from rain and sun. Please avoid severe shock and vibration during the loading and unloading process.

2. Storage

The storage conditions should comply with the Class I Environmental Standards. The products that have been stored for more than six months are recommended to be re-inspected and can be used only after they have been qualified.



#### **FAQs**

- 1. What should I do if I fail to add the device?
  - 1.1 Please make sure the device is powered on normally and is in the activated mode.
  - 1.2 Please make sure the device hasn't been added by any other account. If it did, please reset to factory defaults manually.
  - 1.3 The recommended distance between the mobile phone and the device is no more than 20 meters.
  - 1.4 If the device has been forced to delete, please reset to factory defaults manually and then add the device again.
- 2. What should I do if the device disconnects from the network?
  - 2.1 Please make sure the device is powered on normally.
  - 2.2 Please make sure the router works with network available.
  - $2.3\ \mathsf{lf}\ \mathsf{you}\ \mathsf{control}\ \mathsf{the}\ \mathsf{device}\ \mathsf{remotely}, \ \mathsf{please}\ \mathsf{make}\ \mathsf{sure}\ \mathsf{your}\ \mathsf{phone}\ \mathsf{network}\ \mathsf{works}\ \mathsf{normally}.$
- 3. How to control remotely and set cloud scenes?

Remote control and cloud scenes can achieved only by working with LTECH Super Panel.

4. How to share control of your home devices?

Please go to "Me" - "Home Management" and access the home you want to share. Click "Add Member" and follow the prompts to add members into your home.

#### **Attentions**

- · This product must be installed and adjusted by a qualified professional.
- This product is non-waterproof (special models excepted). Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure.
- Good heat dissipation will extend the life the product. Please install the product in a environment with good ventilation.
- When you install this product, please avoid being near a large area of metal objects or stacking them to prevent signal interference.
- · Please keep the product away from a intense magnetic field, a high pressure area or a place where lightning is easy to occur.
- Please check whether the working voltage used complies with the parameter requirements of the product.
- Before you power on the product, please make sure all the wiring is correct in case of incorrect connection that may cause a short circuit and damage the components, or trigger a accident
- If a fault occurs, please do not attempt to fix the product by yourself. If you have any question, please contact the supplier.
- \* This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

### Warranty Agreement

- Warranty periods from the date of delivery: 5 years.
- Free repair or replacement services for quality problems are provided within warranty periods.

Warranty exclusions below:

- Beyond warranty periods.
- $\bullet \quad \text{Any artificial damage caused by high voltage, overload, or improper operations.} \\$
- · Products with severe physical damage.
- $\bullet \quad \mathsf{Damage} \ \mathsf{caused} \ \mathsf{by} \ \mathsf{natural} \ \mathsf{disasters} \ \mathsf{and} \ \mathsf{force} \ \mathsf{majeure}.$
- Warranty labels and barcodes have been damaged.
- · No any contract signed by LTECH.
- 1. Repair or replacement provided is the only remedy for customers. LTECH is not liable for any incidental or consequential damage unless it is within the law.
- $2.\,\mathsf{LTECH}\,\mathsf{has}\,\mathsf{the}\,\mathsf{right}\,\mathsf{to}\,\mathsf{amend}\,\mathsf{or}\,\mathsf{adjust}\,\mathsf{the}\,\mathsf{terms}\,\mathsf{of}\,\mathsf{this}\,\mathsf{warranty}, \mathsf{and}\,\mathsf{release}\,\mathsf{in}\,\mathsf{written}\,\mathsf{form}\,\mathsf{shall}\,\mathsf{prevail}.$

ZHUHAI LTECH TECHNOLOGY CO., LTD.



LM-150-24-G2B2 LM-150-12-G2B2

# Update Log

Version	Updated Time	Update Content	Updated by
A0	2021.04.09	Original version	Liu Weili
A1	2021.06.05	Update TUV certification icon	Liu Weili
A2	2021.12.10	Update product silk screen	Liu Weili
А3	2023.03.15	The warranty period is changed to 5 years	Liu Weili